



Kroftman storage building

Roof drainage system

(E and H Models)

Installation manuel



HANG GUTTER


Hang gutters are available in dimensions 125mm and in 2 different.



HANG GUTTER
Diameter | 125




GUTTER JOINT
Diameter | 125

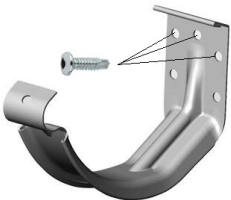

COMPACT BRACKET
Diameter | 125
4.8x25



HOPPER HEAD
Diameter | 125/90

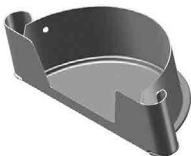

UNIVERSAL GUTTER END
Diameter | 125
4.2x16



PIPE BRACKET (WOOD)
Diameter | 90
5.5x25



OUTLET SHOE
Diameter | 90



DOWNPIPE
Diameter | 90

Mounting Instructions

Tools

Areco's Rainwater system is constructed so that installation is easy. The tools you will need are: pliers, hammer, screwdriver, hacksaw, tape measure and string. If you need a tool to bend the brackets you can hire one from your builders' yard.

Sawing and cutting


Use a hacksaw when sawing rainwater pipes and guttering. Curve shears must not be used because swarf and the heat from the disc can damage the sheet metal's outer layer and galvanised surface.

Estimating quantities


The amount of guttering, rainwater pipes and accessories needed will vary depending on your house. Calculate on the basis that each drainpipe can cope with a maximum gutter length of 12 m. Fascia brackets should be mounted so that the guttering falls towards the drainpipe. Bracket spacings should not exceed 600 mm, with a fall of 5 mm per metre. The dimensions of the guttering and drainpipes should be chosen according to the surface area of the roof.

- Roof size up to c. 50 m² (drainage area): guttering and pipe dimensions 125/75 mm
- Roof size c. 50-100 m² (drainage area): guttering and pipe dimensions 125/90 mm
- For larger surfaces guttering and pipes with dimensions 150/100 mm are available

INSTALLING YOUR GUTTERING

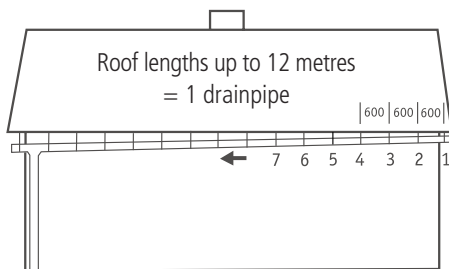


Decide in which direction the gutter is to fall. Choose which bracket you will use. Fix the first and last bracket c. 10 cm from the edge of the roof. Other brackets should be fixed with 600 mm centres (see sketch). Fall 5 mm/metre. Fix the brackets with screws or ring shank nails.

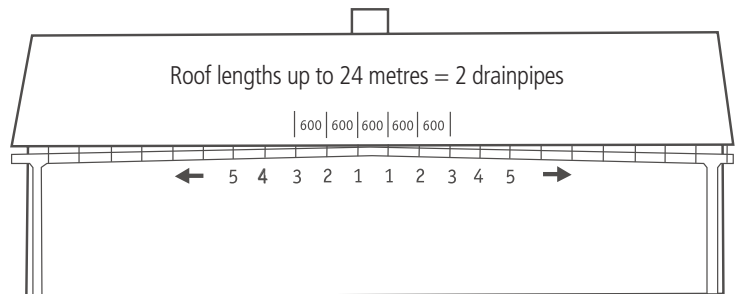


Choose which bracket you will use. Begin to fix the brackets 1-1 c. 300 mm from the middle and fall in both directions. The last bracket should be fixed c. 10 cm from the edge of the roof. The other brackets should be fixed with 600 mm centres (see sketch). Fall 5 mm/metre. Fix the brackets with screws or ring shank nails.

 FITTING GUTTER BRACKETS




Securing to fascia board

Compact brackets or short iron brackets are fixed to the fascia board. If this is angled use adjustable bracket. With roof lengths up to 12 metres fit the first and last bracket c. 10 cm in from the edge of the roof. Fall 5 mm per metre. Attach a string to the underside of the first bracket (see arrow). Attach the string to the last bracket, check that it's taut and the fall is correct. Use the taut string to help you fix the other brackets with 600 mm centres. With roof lengths longer than 12 metres start fitting from the centre.

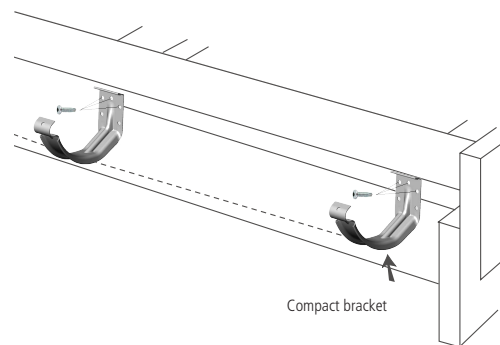

BENDING GUTTER BRACKETS

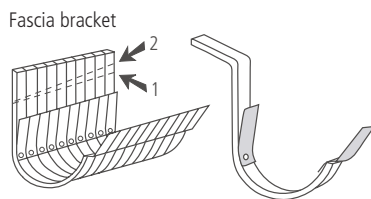


Securing to lathes


Medium/long brackets must be bent so that the gutter has a fall. Line up all the brackets you will need. Draw a line over across all the brackets where they should be bent (arrow 1). Measure from the line on the last bracket so that the fall will be 5 mm/metre. Mark a new line (arrow 2). Bend the brackets according to this line.

Mounting Instructions

FITTING THE GUTTER

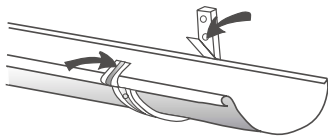


Place the gutter in the brackets, press down the front of the gutter on the brackets and bend the tab over. Then push the gutter down so that it is resting on the bracket and bend the second tab over.

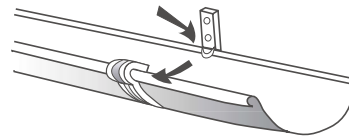


When quick bracket is used the gutter's front edge should be pushed into the hook. Then the gutter should be pressed down so that it locks under the notch in the back of the bracket.

FITTING RUNNING OUTLETS


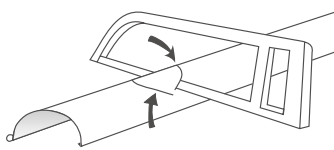


Mark on the gutter where the drainpipe is to be placed. Saw two angled cuts so that you make an opening of c. 10 cm. Bend the edges of the hole down slightly so that the water can run into the drainpipe.


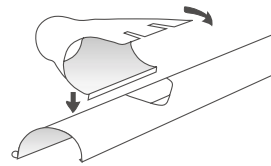


Press the folded edge of the running outlet into the front edge of the gutter. Then move the running outlet down towards the back of the gutter. Bend the outlet's tabs over the back of the gutter so that it locks in place.

FITTING STOPENDS

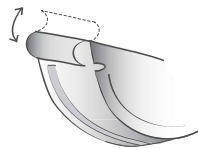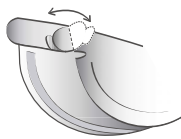

The stopend is combined, for both left and right attachment. Bend off the ear and round, according to the etched line in the stopend, on the side you are **not** going to fit it (see sketch).

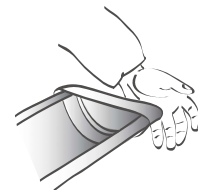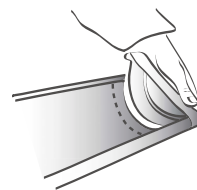


Place joint sealant according to the dotted line. Attach strip sealant on the stopend. Position the stopend in c. 2 cm in the front edge of the gutter, turn it down into the gutter and push it completely in.

JOINTING WITH UNION CLIPS




Bend the union clip slightly outwards before fitting. Then place at least two strings of strip sealant along the whole of the rubber seal that is placed in the union clip.

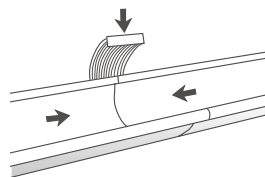

Push the gutters towards each other and put a little joint sealant above and below the joint.




Continue by fastening the union clip over the back edge of the gutter (1) (see previous picture also) and then over the front edge of the gutter (2) (round).

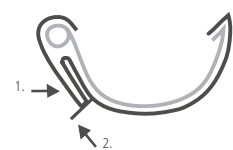

Then push the union clip together with your hand (1) so that it is in contact with the gutter. Then fold over the tab so that it is locked in place (2).

JOINTING WITHOUT UNION CLIPS


Fold up a c. 4 cm long flap along the back edge of the lower gutter. Place joint sealant according to the dotted lines and push in the upper gutter in the lower according to the picture. Fold down the upper gutter in the lower, fold over the flap and push together so that both gutters are locked in place.

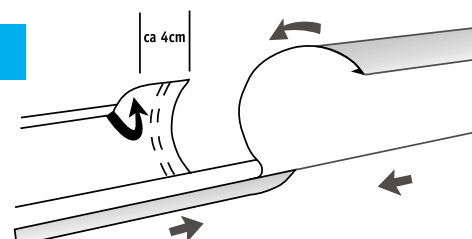


Mounting Instructions

USEFUL ACCESSORIES

4. A spout is fitted when the drainpipe is not attached to the drain system. Use screws or rivets when you fit the spout to the drainpipe.

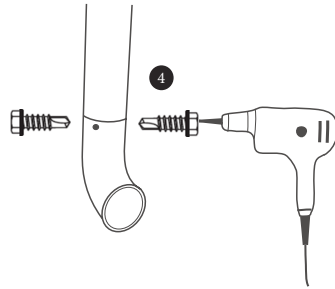

FITTING CLIPS

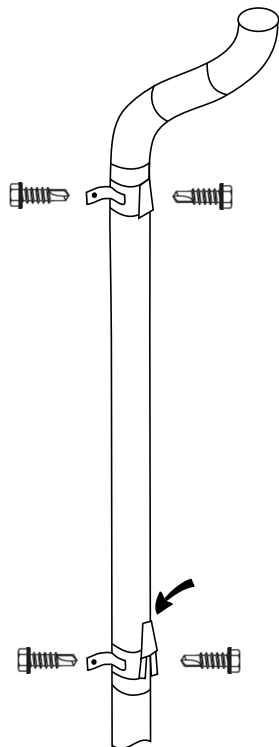

The clip is fitted c. 10 cm under the lower angle. The distance between clips should not be greater than 2 metres. The clip is locked in place with a wedge (wedge's broad side downwards). Hammer the wedge into place with a hammer and wooden block. Clips are available for both timber and stone walls. In stone or brick walls holes should be pre-drilled for attaching the clips (drill in the mortar).

Fit the pipe details on to the drainpipe and attach to the running outlet. Check that the pipe is straight.

